

RAK811 Breakout Board AT Command Manual

Introduction

The RAK811 Breakout Board is designed to simplify LoRaWAN and LoRa point to point (P2P) communication. To integrate LoRa technology into your projects, RAK811 has easy to use AT commands via UART communication interface. Through these AT commands, you can set the parameters needed for LoRa P2P and LoRaWAN communication. You can even control the available GPIO pins and analog input of RAK811. You can also use any microcontroller with a UART interface to control the RAK811 Breakout Board.

The UART serial communication is exposed on the **UART1 port** through **Pin 6 (TX1)** and **Pin 7 (RX1)**. The default parameters of the UART1 communication are **115200 / 8-N-1**. The firmware upgrade is also possible through this port. To get familiar with the pin distribution of this module and find a schematic circuit of a reference application, refer to the [RAK811 Breakout Board Datasheet](#). You can also see the complete RAK811 Breakout Board pin descriptions in [Appendix IV](#).

The RAK811 Breakout Board also supports another serial port through the **Pin 25 (TX3)** and **Pin 26 (RX3)**. This port is named as **UART3** with default parameters **115200 / 8-N-1**. You can use UART3 as alternative to UART1 when sending AT commands. You can also use UART3 when developing custom firmware via [RUI](#). **UART3 pins are not exposed on RAK811 Breakout Module**. You can use RAK811 Breakout Board or RAK811 Evaluation Board if you need UART3 pins.

For AT commands example usage, you can check these sections of the Quick Start Guide:

- [TTN OTAA/ABP](#)
- [ChirpStack OTAA/ABP](#)
- [LoRa P2P](#)

AT Command Syntax

The AT command is based on ASCII characters. A command begins with the prefix `AT` or `at` and ends with `<CR><LF>` (i.e. `\r\n`). The maximum length is **255 characters**, which includes the `<CR><LF>` characters at the end of the command. For the rest of the document, the `\r\n` part is omitted for the sake of clarity.

The AT commands can be classified in the following groups:

- **Read Command:** Reads the current configuration or status of the module. The command name and the list of parameters are separated by `=` character. The `<m>` parameter is separated with its associated value `<n>` by the `:` character.

```
at+get_config=<m>:<n>
```

- **Write Command:** Writes/Modifies the current configuration of the module. The command name and the list of parameters are separated by `=` character. The `<m>` parameter is separated with its associated value `<n>` by the `:` character.

```
at+set_config=<m>:<n>
```

- **Operational Command:** Some commands are neither read nor write commands but are used to execute an action.

```
at+send=lora:<m>:<n> // Sends data through the LoRa transceiver.
```

- **Special Command:** The RAK811 UART port has two operational modes: **Configuration Mode** and **Data Transmission Mode**. When switching from data transmission mode to configuration mode, the command to be entered is `+++` and does not contain terminators such as `\r` and `\n`.

After the command is executed by the module, a reply is sent back to the external MCU. If the command is successful, the usual reply has the following format:

```
OK [information]\r\n
```

 **NOTE:**

Only Read Commands have information in the replied message, while Write Commands do not have an informative description.

The firmware developed running in the external MCU will expect at a minimum string of `ok\r\n` after sending a successful command to the board. On the other hand, when the command is not successfully executed by the board, you will receive a response in the following format:

```
ERROR: [ErrCode]\r\n
```

Error Code Table

Error Code	Description
1	The last command received is an unsupported AT command.
2	Invalid parameter in the AT command.
3	There is an error when reading or writing the flash memory.
4	There is an error when reading or writing through IIC bus.
5	There is an error when sending data through the UART port.
80	The LoRa transceiver is busy, could not process a new command.
81	LoRa service is unknown. Unknown MAC command received by node. Execute commands that are not supported in the current state, such as sending <code>at+join</code> command in P2P mode.
82	The LoRa parameters are invalid.
83	The LoRa parameters are invalid.
84	The LoRa data rate (DR) is invalid.
85	The LoRa frequency and data rate are invalid.
86	The device has not joined into a LoRa network.
87	The length of the packet exceeded the maximum allowed by the LoRa protocol.
88	Service is closed by the server. Due to the limitation of duty cycle, the server will send "SRV_MAC_DUTY_CYCLE_REQ" MAC command to close the service.
89	This is an unsupported region code.
90	Duty cycle is restricted. Due to duty cycle, data cannot be sent at this time until the time limit is removed.
91	No valid LoRa channel could be found.
92	No available LoRa channel could be found.
93	Status is error. Generally, the internal state of the protocol stack is wrong.
94	Time out reached while sending the packet through the LoRa transceiver.
95	Time out reached while waiting for a packet in the LoRa RX1 window.
96	Time out reached while waiting for a packet in the LoRa RX2 window.
97	There is an error while receiving a packet during the LoRa RX1 window.

Error Code	Description
98	There is an error while receiving a packet during the LoRa RX2 window.
99	Failed to join into a LoRa network.
100	Duplicate downlink message is detected. A message with an invalid downlink count is received.
101	Payload size is not valid for the current data rate (DR).
102	Many downlink packets are lost.
103	Address fail. The address of the received packet does not match the address of the current node.
104	Invalid MIC is detected in the LoRa message.

General AT Command

1. at+version

This command is used to get the current firmware version number.

Operation	Command	Response
Read	<code>at+version</code>	<code>OK <version number></code>

Parameter: NONE

Example:

```
at+version\r\n
OK V3.0.0.14.H
```

2. at+help

This command is used to obtain all AT commands supported by the current firmware.

Operation	Command	Response
Read	<code>at+help</code>	<code>OK <all AT commands></code>

Parameter: NONE

Example:

```
at+help\r\n
```

OK Device AT commands:

```
at+version
at+help
at+set_config=device:restart
at+set_config=device:sleep:X
at+get_config=device:status
at+set_config=device:uart:X:Y
at+set_config=device:uart_mode:X:Y
at+send=uart:X:YYY
at+set_config=device:gpio:X:Y
at+get_config=device:gpio:X
at+get_config=device:adc:X
```

LoRaWAN AT commands:

```
at+set_config=lora:default_parameters
at+join
at+send=lora:X:YYY
at+set_config=lora:region:XXX
at+get_config=lora:channel
at+set_config=lora:dev_eui:XXXX
at+set_config=lora:app_eui:XXXX
at+set_config=lora:app_key:XXXX
at+set_config=lora:dev_addr:XXXX
at+set_config=lora:apps_key:XXXX
at+set_config=lora:nwks_key:XXXX
at+set_config=lora:multicastenable:X
at+set_config=lora:multicast_dev_addr:XXXX
at+set_config=lora:multicast_apps_key:XXXX
at+set_config=lora:multicast_nwks_key:XXXX
at+set_config=lora:join_mode:X
at+set_config=lora:work_mode:X
at+set_config=lora:ch_mask:X:Y
at+set_config=lora:class:X
at+set_config=lora:confirm:X
at+set_config=lora:dr:X
at+set_config=lora:tx_power:X
at+set_config=lora:adr:X
at+get_config=lora:status
at+set_config=lora:dutycycle_enable:X
at+set_config=lora:send_repeat_cnt:X
```

LoRaP2P AT commands:

```
at+set_config=lorap2p:XXX:Y:Z:A:B:C
at+set_config=lorap2p:transfer_mode:X
at+send=lorap2p:XXX
```

3. `at+set_config=device:restart`

This command is used to restart the device.

Operation	Command	Response
Read	<code>at+set_config=device:restart</code>	

Parameter: NONE

Example:

```
at+set_config=device:restart

LoRa (R) is a registered trademark or service mark of Semtech Corporation or its affiliates. LoRa

RAK811 Version:3.0.0.14.H
UART1 work mode: RUI_UART_NORMAL, 9600, N81
UART3 work mode: RUI_UART_NORMAL, 115200, N81
LoRa work mode: P2P
LoRa P2P Transfer_mode: Sender
Initialization OK
```

4. `at+set_config=device:sleep: <status>`

This command is used to change the current state of the device between the sleep and the wake-up mode.

Operation	Command	Response
Write	<code>at+set_config=device:sleep:<status></code>	<code>OK<STATUS></code>

Parameter:

Status 0: wake up
 1: sleep

Example:

```
at+set_config=device:sleep:1\r\n
OK Sleep

at+set_config=device:sleep:0\r\n
OK Wake Up
```

5. `at+get_config=device:status`

This command is used to obtain the current status of the device.

Operation	Command	Response
Read	<code>at+get_config=device:status</code>	<code>OK<information></code>

Parameter: None

Example:

```
at+get_config=device:status\r\n
OK Board Core:RAK811
MCU:STM32L151CUB6A
LoRa chip: SX1276
```

Interface Type AT Command

1. `at+set_config=device:uart:<index>:<baud_rate>`

This command is used to configure the baud rate for a UART port.

 **NOTE:**

There will be no reply after executing this configuration if a different baud rate is set. To make your UART serial communication work again, configure the UART baud rate setting of the Serial Port Tool based on the new baud rate.

Operation	Command	Response
Write	<code>at+set_config=device:uart:<index>:<baud_rate></code>	OK

Parameter:

index	UART Number: 1 or 3. Two UART ports are currently supported starting FW V3.0.0.14.H - UART1 and UART3
baud_rate	UART Baud rate : 1200, 2400, 4800, 9600, 19200, 38400, 57600, 115200

Example:

```
at+set_config=device:uart:1:115200\r\n
```

2. `at+set_config=device:uart_mode:<index>:<mode>`

This command is used to set the UART operation between the AT configuration mode and the data transmission mode.

Operation	Command	Response
Write	<code>at+set_config=device:uart_mode:<index>:<mode></code>	OK

Parameter:

index	UART Number: 1 or 3. Two UART ports are currently supported starting FW V3.0.0.14.H - UART1 and UART3
mode	UART Mode : Only 1 can be selected, which means the UART is set to data transmission mode.

 **NOTE:**

To switch from data transmission mode to configuration mode, use `+++` (`+++` without `\ r\ n`).

Example:

```
at+set_config=device:uart_mode:1:1\r\n
OK

+++
OK
```

3. at+send=uart: <index>:<data>

This command is used for sending data over a UART port.

Operation	Command	Response
Write	<code>at+send=uart:<index>:<data></code>	<code>OK</code>

Parameter:

index	UART Port Number. Currently, the RAK811 only supports UART1.
mode	The data you want to send. The maximum length of data is 250 characters , equivalent to 255 — the length of <code>at+...</code> — the length of <code>\ r\ n</code> .

Example:

```
at+send=uart:1:12345\r\n
OK
```

4. at+get_config=device:gpio: <pin_num>

This command is used to obtain the voltage level status of a pin on a module. The pin number mapping can be found in the Pin Definition section of the [Datasheet](#).

Operation	Command	Response
Read	<code>at+get_config=device:gpio:<pin_num></code>	<code>OK<status></code>

Parameter:

pin_num	Pin index of the module
status (Return Value)	0: Low Voltage Level 1: High Voltage Level

Example:

```
at+get_config=device:gpio:2\r\n
OK 1
```

5. at+set_config=device:gpio: <pin_num>:<status>

This command is used to set the voltage level state (high or low) of a pin on a board.

Operation	Command	Response
Write	at+set_config=device:gpio:<pin_num>:<status>	OK

Parameter:

pin_num	Pin index of the module
status	0: Low Voltage Level 1: High Voltage Level

Example:

```
at+set_config=device:gpio:2:0\r\n
OK
```

6. at+get_config=device:adc: <pin_num>

This command is used to obtain the voltage level of an ADC pin of the board.

Operation	Command	Response
Read	at+get_config=device:adc:<pin_num>	OK<voltage>

Parameter:

pin_num	ADC pin index of the module
Voltage (Return Value)	Voltage, Unit: mV

Example:

```
at+get_config=device:adc:2\r\n
OK 1663mV
```

LoRaWAN Type AT Command

1. at+join

This command is used to join a LoRaWAN network.

Operation	Command	Response
	<code>at+join</code>	<code>OK Join Success</code>

Parameter: NONE

Example:

```
at+join\r\n
OK Join Success
```

2. at+send=lora: <port>:<data>

This command is used to send data via LoRaWAN.

Operation	Command	Response
	<code>at+send=lora:<port>:<data></code>	<code>OK</code>

Parameter:

port Sending port of LoRa. The value range is 1-223.

data The sending data format is in hexadecimal format. The possible values are between **00-FF**. The module will internally cast every two characters into a byte before sending it to the LoRa transceiver. The maximum length varies depending on the band frequency and DR (LoRaWAN standard). Refer to [Appendix III](#).

Example:

When sending data as unconfirmed uplink:

```
at+send=lora:1:5A00\r\n
OK
```

When sending data as confirmed uplink:

```
at+send=lora:1:5A00\r\n
OK
at+recv=0, -105, -12, 0
```

 **NOTE:**

When sending a confirmed message, you will receive an ACK response, i.e. `at+recv=...`. The `0, -105, -12, 0` stands for:

- `0` : For the LoRa port;
- `-105` : For the RSSI;
- `-12` : For the SNR;
- `0` : For the length of the data (no valid data in ACK).

3. `at+set_config=lora:region: <region>`

This command is used for setting the appropriate working frequency band.

Operation	Command	Response
Write	<code>at+set_config=lora:region:<region></code>	OK

Parameter:

region EU433, CN470, IN865, EU868, US915, AU915, KR920, AS923. The default is EU868.

Example:

```
at+set_config=lora:region:EU868\r\n
OK
```

 **NOTE:**

In the AS923 frequency band, the supported frequency plan is "as2" and dwell is set to 1.

4. `at+get_config=lora:channel`


This command is used to read all the LoRa channel information given the current region configured on the board.

Operation	Command	Response
Read	<code>at+get_config=lora:channel</code>	OK <channel information>

Parameter: NONE

Example: EU868 region

```
at+get_config=lora:channel\r\n
OK *0,on,868100000,0,5; *1,on,868300000,0,5; *2,on,868500000,0,5; 3,off,0,0,0; 4,off,0,0,0; 5,off,0,0,0
```

 **NOTE:**

With "***0,on,868100000,0,5**" as an example, the following is the channel parameter analysis:

- `*` at the beginning if the channel is open;
- `0` is the channel ID;
- `on` indicates the current status of the channel;
- `868100000` is the actual frequency of the channel, unit is Hz;
- `0,5` indicates the DR of the channel, DR0~DR5.

5. **at+set_config=lora:ch_mask: <channel_number>:<status>**

This command is used for switching a channel (turn on or off) in the current region.

Operation	Command	Response
Write	<code>at+set_config=lora:ch_mask:<channel_number>:<status></code>	<code>OK</code>

Parameter:

channel_number	Channel number
status	0: off 1: on

Example:

```
at+set_config=lora:ch_mask:0:0\r\n
OK
```

6. **at+set_config=lora:dev_eui: <dev_eui>**

This command is used to set the Device EUI parameter for the LoRaWAN OTAA mode.

Operation	Command	Response
Write	<code>at+set_config=lora:dev_eui:<dev_eui></code>	<code>OK</code>

Parameter:

dev_eui	Device EUI
---------	------------

Example:

Operation	Command	Response
Write	<code>at+set_config=lora:multicastenable:<IsEnable></code>	OK

Parameter:

IsEnable
 0: disable
 1: enable
 The default is disable.

Example:

```
at+set_config=lora:multicastenable:1\r\n
OK
```

13. `at+set_config=lora:multicast_dev_addr: <multicast_dev_addr>`

This command is used for setting the Device Address for the multicast feature.

Operation	Command	Response
Write	<code>at+set_config=lora:multicast_dev_addr:<multicast_dev_addr></code>	OK

Parameter:

multicast_dev_addr Multicast Device Address

Example:

```
at+set_config=lora:multicast_dev_addr:260111fd\r\n
OK
```

14. `at+set_config=lora:multicast_apps_key: <multicast_apps_key>`

This command is used for setting of the Application Session Key for the multicast feature.

Operation	Command	Response
Write	<code>at+set_config=lora:multicast_apps_key:<multicast_apps_key></code>	OK

Parameter:

multicast_app_addr Multicast Application Session Key

Example:

Operation	Command	Response
Write	<code>at+set_config=lora:class:<class></code>	OK

Parameter:

class

0: Class A
 1: Class B (Not supported at this time)
 2: Class C
 The default is Class A.

Example:

```
at+set_config=lora:class:0\r\n
OK
```

18. `at+set_config=lora:confirm:<type>`

This command is used for setting the type messages to be sent: Confirmed/Unconfirmed.

Operation	Command	Response
Write	<code>at+set_config=lora:confirm:<type></code>	OK

Parameter:

type

0: unconfirm type
 1: confirm type
 The default is unconfirm type.

Example:

```
at+set_config=lora:confirm:0\r\n
OK
```

19. `at+set_config=lora:dr:<dr>`

This command is used to set the data rate (DR) of LoRa.

Operation	Command	Response
Write	<code>at+set_config=lora:dr:<dr></code>	OK

Parameter:

dr The data rate of LoRa is related to the current region. In most of the LoRa areas, it is common to use 0 to 5. Detailed reference can be made to LoRaWAN 1.0.2 specification.

20. `at+set_config=lora:tx_power:<tx_power>`

This command is used to set the RF transmission power level of the LoRa transceiver. The unit is in dBm.

Operation	Command	Response
Write	<code>at+set_config=lora:tx_power:<tx_power></code>	OK

Parameter:

`tx_power` LoRa transmit power level varies depending on frequency band and DR. Refer to the LoRaWAN 1.0.2 specification or Appendix II for details. The default is 0.

Example:

```
at+set_config=lora:tx_power:0\r\n
OK
```

21. `at+set_config=lora:adr:<status>`

This command is used to turn on/off the ADR feature of the LoRa communication.

Operation	Command	Response
Write	<code>at+set_config=lora:adr:<status></code>	OK

Parameter:

`status` 0: Turn off
1: Turn on
The default is on.

Example:

```
at+set_config=lora:adr:0\r\n
OK
```

22. `at+get_config=lora:status`

This command is used to get all the information related to the current LoRa status, except the channel information.

Operation	Command	Response
Read	<code>at+get_config=lora:status</code>	OK <lora status detail>

Parameter: NONE

Example:

```
at+get_config=lora:status\r\n
OK Work Mode: LoRaWAN
Region: EU868
Send_interval: 600s
Auto send status: false.
MulticastEnable: true.
Multi_Dev_Addr: 260111FD
Multi_Apps_Key: F13DDFA2619B10411F02F042E1C0F356
Multi_Nwks_Key: 1D1991F5377C675879C39B6908D437A6
Join_mode: OTAA
DevEui: 00000000000000888
AppEui: 00000000000000888
AppKey: 000000000000008880000000000000888
Class: C
Joined Network:false
IsConfirm: unconfirm
AdrEnable: true
EnableRepeaterSupport: false
RX2_CHANNEL_FREQUENCY: 869525000, RX2_CHANNEL_DR:0
RX_WINDOW_DURATION: 3000ms
RECEIVE_DELAY_1: 1000ms
RECEIVE_DELAY_2: 2000ms
JOIN_ACCEPT_DELAY_1: 5000ms
JOIN_ACCEPT_DELAY_2: 6000ms
Current Datarate: 4
Primeval Datarate: 4
ChannelsTxPower: 0
UpLinkCounter: 0
DownLinkCounter: 0
```

23. at+set_config=lora:dutycycle_enable: <status>

This command is used to enable or disable the Duty Cycle feature.

Operation	Command	Response
Write	at+set_config=lora:dutycycle_enable:<status>	OK

Parameter:

status 0: disable
 1: enable
 The default is disable.

Example:

```
at+set_config=lora:dutycycle_enable:1\r\n
OK
```

24. at+set_config=lora: send_repeat_cnt: <num>

This command is used to set the number of retransmitting attempts on an uplink message. When activated, the board will resend a message if its corresponding ACK (downlink) is not received after sending a confirmed uplink message. The default value is 0, which means that the board will not resend any message by default.

Operation	Command	Response
Write	<code>at+set_config=lora: send_repeat_cnt:<num></code>	OK

Parameter:

num Number of retries, up to 8.
The default is 0.

Example:

```
at+set_config=lora:send_repeat_cnt:1\r\n
OK
```

25. at+set_config=lora:default_parameters

This command is used to restore OTAA, ABP, multicast related network access parameters set at the factory, including dev_eui, app_eui, etc.

Operation	Command	Response
Write	<code>at+set_config=lora:default_parameters</code>	OK

Parameter: NONE

Example:

```
at+set_config=lora:default_parameters\r\n
OK
```

LoRa P2P Type AT Command

1. at+set_config=lora:work_mode: <mode>

This command is used to switch the LoRa work mode between the LoRaWAN and the LoRa P2P mode. This command will cause the module to restart.

Operation	Command	Response
Write	<code>at+set_config=lora:work_mode:<mode></code>	

Parameter:

Work mode of LoRa

mode

- 0: LoRaWAN
- 1: LoRa P2P

The default is LoRaWAN mode.

Example :

```
at+set_config=lorawork_mode:1\r\n
UART1 work mode: RUI_UART_NORMAL
Current work_mode:P2P
Initialization OK
```

2. `at+set_config=lorap2p:<frequency>:<spreadfact>:<bandwidth>:<codingrate>:<premlen>:<power>`

This command is used to set the relevant parameters of LoRa P2P mode and is only valid when the LoRa mode is switched to LoRa P2P before.

Operation	Command	Response
Write	<code>at+set_config=lorap2p:<frequency>:<spreadfact>:<bandwidth>:<codingrate>:<premlen>:<power></code>	OK

Parameter:

frequency	Frequency, the unit is Hz The default is 869525000 Hz.
spreadfact	Spreading factor The default is 12.
bandwidth	0: 125 kHz 1: 250 kHz 2: 500 kHz The default is 0.
codeingrate	1: 4/5 2: 4/6 3: 4/7 4: 4/8 The default is 1.
preamble	Preamble Length. 5~65535 The default is 8.
power	TX power. The unit is in dBm. 5~20 The default is 20.

Example :

```
at+set_config=lorap2p:869525000:12:0:1:8:20\r\n
OK
```

3. `at+set_config=lorap2p:transfer_mode: <mode>`

This command is used to switch the state of the LoRa transceiver between sending and receiving state, and it is only valid when the LoRa mode is set to LoRa P2P before.

Operation	Command	Response
Write	<code>at+set_config=lorap2p: transfer_mode:<mode></code>	OK

Parameter :

mode

- 1: receiver mode
- 2: sender mode

The default is sender mode.

Example :

```
at+set_config=lorap2p:transfer_mode:1\r\n
OK
```

4. `at+send=lorap2p: <data>`

This command is used to send data through LoRa P2P and only valid when the LoRa work mode is set to LoRa P2P before.

Operation	Command	Response
Send	<code>at+send=lorap2p:<data></code>	OK

Parameter :

data The data to be sent, and the format is hexadecimal.

Example :

```
at+send=lorap2p:1234\r\n
OK
```

In LoRa P2P mode, the receiving node receives the data and outputs the data in the following format:

```
at+recv=<RSSI>,<SNR>,<Data Length>:<Data>
```

Appendix I : Data Rate by Region

EU433/EU868/AS923

Data Rate	Configuration	Indicative Physical Bit Rate [bit/s]
0	LoRa: SF12 / 125 kHz	250
1	LoRa: SF11 / 125 kHz	440
2	LoRa: SF10 / 125 kHz	980
3	LoRa: SF9 / 125 kHz	1760
4	LoRa: SF8 / 125 kHz	3125
5	LoRa: SF7 / 125 kHz	5470
6	LoRa: SF7 / 250 kHz	11000
7	FSK: 50 kbps	50000
8 ~ 15	RFU	

CN470/KR920

Data Rate	Configuration	Indicative Physical Bit Rate [bit/s]
0	LoRa: SF12 / 125 kHz	250
1	LoRa: SF11 / 125 kHz	440
2	LoRa: SF10 / 125 kHz	980
3	LoRa: SF9 / 125 kHz	1760
4	LoRa: SF8 / 125 kHz	3125
5	LoRa: SF7 / 125 kHz	5470
6 ~ 15	RFU	

US915

Data Rate	Configuration	Indicative Physical Bit Rate [bit/s]
0	LoRa: SF10 / 125 kHz	980
1	LoRa: SF9 / 125 kHz	1760
2	LoRa: SF8 / 125 kHz	3125
3	LoRa: SF7 / 125 kHz	5470
4	LoRa: SF8 / 500 kHz	12500
5 ~ 7	RFU	
8	LoRa: SF12 / 500 kHz	980
9	LoRa: SF11 / 500 kHz	1760
10	LoRa: SF10 / 500 kHz	3900
11	LoRa: SF9 / 500 kHz	7000
12	LoRa: SF8 / 500 kHz	12500
13	LoRa: SF7 / 500 kHz	21900
14 ~ 15	RFU	

AU915

Data Rate	Configuration	Indicative Physical Bit Rate [bit/s]
0	LoRa: SF12 / 125 kHz	250
1	LoRa: SF11 / 125 kHz	440
2	LoRa: SF10 / 125 kHz	980
3	LoRa: SF9 / 125 kHz	1760
4	LoRa: SF8 / 125 kHz	3125
5	LoRa: SF7 / 125 kHz	5470
6	LoRa: SF8 / 500 kHz	12500
7	RFU	RFU
8	LoRa: SF12 / 500 kHz	980
9	LoRa: SF11 / 500 kHz	1760
10	LoRa: SF10 / 500 kHz	3900
11	LoRa: SF9 / 500 kHz	7000
12	LoRa: SF8 / 500 kHz	12500

IN865

Data Rate	Configuration	Indicative Physical Bit Rate [bit/s]
0	LoRa: SF12 / 125 kHz	250
1	LoRa: SF11 / 125 kHz	440
2	LoRa: SF10 / 125 kHz	980
3	LoRa: SF9 / 125 kHz	1760
4	LoRa: SF8 / 125 kHz	3125
5	LoRa: SF7 / 125 kHz	5470
6	RFU	RFU
7	FSK: 50 kbps	50000
8 ~ 15	RFU	RFU

Appendix II : TX Power by Region

EU868

By default, MaxEIRP is considered to be +16 dBm.

TXPower	Configuration (EIRP)
0	MaxEIRP
1	MaxEIRP - 2 dB
2	MaxEIRP - 4 dB
3	MaxEIRP - 6 dB
4	MaxEIRP - 8 dB
5	MaxEIRP - 10 dB
6	MaxEIRP - 12 dB
7	MaxEIRP - 14 dB
8 ~ 15	RFU

US915

TXPower	Configuration (conducted power)
0	30 dBm - 2*TXpower
1	28 dBm
2	26 dBm
3 ~ 9	
10	10 dBm
11 ~ 15	RFU

AU915

By default, MaxEIRP is considered to be +30 dBm.

TXPower	Configuration (EIRP)
0	MaxEIRP
1 ~ 10	MaxEIRP - 2*TXPower
11 ~ 10	RFU

KR920

By default, MaxEIRP is considered to be +14 dBm.

TXPower	Configuration (EIRP)
0	MaxEIRP
1	MaxEIRP - 2 dB
2	MaxEIRP - 4 dB
3	MaxEIRP - 6 dB
4	MaxEIRP - 8 dB
5	MaxEIRP - 10 dB
6	MaxEIRP - 12 dB
7	MaxEIRP - 14 dB
8 ~ 15	RFU

AS923

By default, Max EIRP shall be 16 dBm.

TXPower	Configuration (EIRP)
0	MaxEIRP
1	MaxEIRP - 2 dB
2	MaxEIRP - 4 dB
3	MaxEIRP - 6 dB
4	MaxEIRP - 8 dB
5	MaxEIRP - 10 dB
6	MaxEIRP - 12 dB
7	MaxEIRP - 14 dB
8 ~ 15	RFU

IN865

By default, MaxEIRP is considered to be 30 dBm.

TXPower	Configuration (EIRP)
0	MaxEIRP
1	MaxEIRP - 2 dB
2	MaxEIRP - 4 dB
3	MaxEIRP - 6 dB
4	MaxEIRP - 8 dB
5	MaxEIRP - 10 dB
6	MaxEIRP - 12 dB
7	MaxEIRP - 14 dB
8	MaxEIRP - 16 dB
9	MaxEIRP - 18 dB
10	MaxEIRP - 20 dB
11 ~ 15	RFU

CN470

By default, MaxEIRP is considered to be +19.15 dBm.

TXPower	Configuration (EIRP)
0	MaxEIRP
1	MaxEIRP - 2 dB
2	MaxEIRP - 4 dB
3	MaxEIRP - 6 dB
4	MaxEIRP - 8 dB
5	MaxEIRP - 10 dB
6	MaxEIRP - 12 dB
7	MaxEIRP - 14 dB
8 ~ 15	RFU

EU433

By default, MaxEIRP is considered to be +12.15 dBm.

TXPower	Configuration (EIRP)
0	MaxEIRP
1	MaxEIRP - 2 dB
2	MaxEIRP - 4 dB
3	MaxEIRP - 6 dB
4	MaxEIRP - 8 dB
5	MaxEIRP - 10 dB
6 ~ 15	RFU

Appendix III : Maximum Transmission Load by Region

 **NOTE:**

The LoRaWAN stack adds 8 bytes to the user payload. In the following list, M is the maximum payload size and N is the maximum usable payload size for the user data without MAC header.

EU868

Data Rate	M	N
0	59	51
1	59	51
2	59	51
3	123	115
4	250	242
5	250	242
6	250	242
7	250	242
8 ~ 15	Not Defined	Not Defined

US915

Data Rate	M	N
0	19	11
1	61	53
2	133	125
3	250	242
4	250	242
5 ~ 7	Not Defined	Not Defined
8	61	53
9	137	129
10	250	242
11	250	242
12	250	242
13	250	242
14 ~ 15	Not Defined	Not Defined

AU915

Data Rate	M	N
0	59	51
1	59	51
2	59	51
3	123	115
4	250	242
5	250	242
6	250	242
7	Not Defined	Not Defined
8	61	53
9	137	129
10	250	242
11	250	242
12	250	242
13	250	242
14 ~ 15	Not Defined	Not Defined

KR920

Data Rate	M	N
0	59	51
1	59	51
2	59	51
3	123	115
4	250	242
5	250	242
6 ~ 15	Not Defined	Not Defined

AS923

Data Rate	Uplink MAC Payload Size (M)		Downlink MAC Payload Size (M)	
	UplinkDwellTime = 0	UplinkDwellTime = 1	DownlinkDwellTime = 0	DownlinkDwellTime = 1
0	59	N/A	59	N/A
1	59	N/A	59	N/A
2	59	19	59	19
3	123	61	123	61
4	250	133	250	133
5	250	250	250	250
6	250	250	250	250
7	250	250	250	250
8	RFU		RFU	

IN865

Data Rate	M	N
0	59	51
1	59	51
2	59	51
3	123	115
4	250	242
5	250	242
6	250	242
7	250	242
8 ~ 15	Not Defined	Not Defined

CN470

Data Rate	M	N
0	59	51
1	59	51
2	59	51
3	123	115
4	250	242
5	250	242
6 ~ 15	Not Defined	Not Defined

EU433

Data Rate	M	N
0	59	51
1	59	51
2	59	51
3	123	115
4	250	242
5	250	242
6	250	242
7	250	242
8 ~ 15	Not Defined	Not Defined

Appendix IV: Pin Description of RAK811 Breakout Board

The pin definition of the RAK811 Breakout Board can be reviewed in the [Pin Definition](#) section the Datasheet.

Listed are the summary of the pins of the RAK811 Breakout Board:

1. About the UART Pin:

- Pin 6 (TX1) and Pin 7 (RX1) are reserved for UART1.
- Pin 25 (TX3) and Pin 26 (RX3) are reserved for UART3.
- During sleep, Pin 7 (RX1) and Pin 26 (RX3) are configured as external interrupt mode, internal pull-down resistor, and bilateral edge trigger wake-up.

2. **About the SWD debug Pin:** Pin 10 (SWDIO) and Pin 13 (SWCLK) are used for SWD connection.

3. **About the power Pin:** The power pin on the RAK811 Breakout Board includes VCC/GND, Pin 1, Pin 11, Pin 12, Pin 21, Pin 28, Pin 29, Pin 30, Pin 31, Pin 32, and Pin 34.

4. **About the reset Pin:** The reset pin on the RAK811 Breakout Board is the Pin 24.

5. **About the BOOT Pin:** The BOOT0 Pin on the RAK811 Breakout Board is Pin 17.

6. **About the RF antenna Pin:** The RF antenna Pin on the RAK811 Breakout Board is the Pin 33.

7. **About the ADC Pin:** The ADC Pins available on the RAK811 are different between the high and low-frequency modules.

- In the low-frequency modules, the ADC Pins are the following: Pin 2, Pin 3, Pin 4, Pin 5, Pin 15, Pin 20, Pin 22, and Pin 23.
- In the high-frequency modules, the ADC Pins are the following: Pin 2, Pin 3, Pin 4, Pin 20, Pin 22, and Pin 23.

8. **About the GPIO:** The GPIO Pin available on the RAK811 Breakout Board are the Pin 2, Pin 3, Pin 4, Pin 5, Pin 8, Pin 9, Pin 14, Pin 15, Pin 16, Pin 18, Pin 19, Pin 20, Pin 22, Pin 23, and Pin 27.

 **NOTE:**

If you want to use the RAK811 Breakout Board to make a product, you should understand how to upgrade the RAK811 firmware in the future. As mentioned, the firmware of the RAK811 Breakout Board can be upgraded through the SWD or UART1 port. Both requires a general-purpose PC.

Last Updated: 2/23/2021, 6:16:03 AM
